
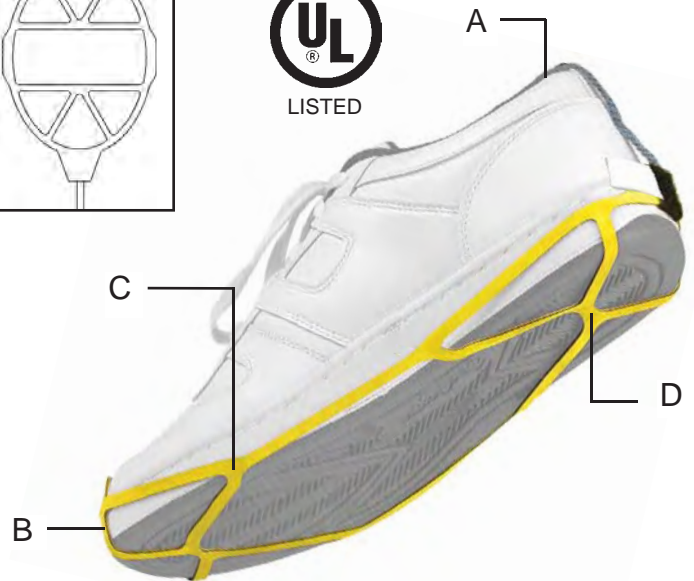


ESD SYSTEMS.com

PROPER INSTALLATION OF FULL COVERAGE NON-MARRING FOOT GROUNDERS

- 1) Insert the conductive grounding tab (A) inside the shoe and under the foot.

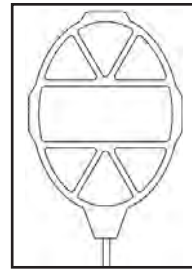

- 2) Pull front (B) and side (C) extension tabs securing Full Coverage Foot Grounder around the outside of shoe's toe.



- 4) Then, tuck excess conductive grounding tab (A) into the shoe.



- 3) Extend positioning straps (D) around heel of shoe.



- 5) Test each foot grounder on an ESD footwear tester to confirm proper installation.

